

**SPIKECAM Body Camera
USER MANUAL**

Model: Z9 Pro

<https://www.spikecam.com>



Dear Valued Customer,

We sincerely appreciate your decision to select our product. The Z9 Pro is an innovative portable camera created by SPIKECAM, offering exceptional audio and video quality, motion detection, and photography capabilities. Furthermore, it provides up to 6 hours of uninterrupted, high-definition video recording time. You can effortlessly review your recorded videos using the 1.5-inch LCD screen on the rear of the camera. To ensure you make the most of this product, we kindly urge you to thoroughly read the user manual and retain it for future reference.

For your convenience, we have prepared brief video tutorials lasting only a few minutes. You can access these tutorials by visiting <https://www.spikecam.com/z9pro> or by scanning the QR code provided below. Should you have any inquiries or require assistance, please do not hesitate to reach out to our dedicated customer service team at info@spikecam.com, and we assure you a response within 24 hours.


Once again, thank you for choosing SPIKECAM.

Warm regards,
The SPIKECAM Team



Scan to watch training video
<https://www.spikecam.com/z9pro>

Diagram

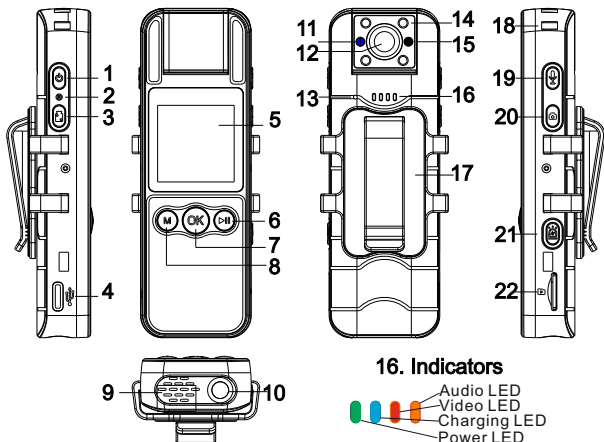

- 01. **Power Button**
- 02. Reset Button
- 03. **Video Button/Return Button**
- 04. USB C Port
- 05. 1.5 Inch LCD
- 06. Right Button/Playback Button
- 07. OK Button
- 08. Left Button/Menu Button
- 09. Speaker
- 10. 1/4 inch Threaded Hole
- 11. SOS Alarm LED

16. Indicators

- Audio LED
- Video LED
- Charging LED
- Power LED

- 12. Camera Lens
- 13. Microphone
- 14. Infrared Lights
- 15. Photoresistor
- 16. Indicators**
- 17. Detachable Clip
- 18. Lanyard Loop
- 19. Audio Button
- 20. Photo Button/IR Button
- 21. SOS Alarm Button
- 22. TF Card Slot

Specification

RECORDING	
Video Resolution	4K/2K/1080P
Video Format	.MOV
Recording Angle	180 Degrees Rotational
Audio	High Quality Built-in Microphone.
Recording Indicator	LED Indicator
Water Mark	Time and Date Stamp Embedded into Video.
Frame Rate	30fps
Video Length	5/10/15/20/30 Mins
Activation prompt	LED Indicators/Beep Prompts
PHOTOGRAPH	
Photo Size	8/12/14/20/26/34/40/48 Megapixels
Camera Format	JPEG
BATTERY	
Type	Built-in 1700mAH Lithium (LiCoO2)
Charging Time	180 minutes
Battery Life	About 6 hours at 1080P(Night Vision Off)
OTHERS	
Storage Capacity	64/128GB(Maximum 1024GB Depending on your version)
IR LED Lights	4PCS 850nm Infrared LED
Night Vision	Manual/Auto
Loop Recording	Support
Waterproof	Ip65
Dimensions	105 mm *35 mm *17mm
Weight	63 gram
WiFi	Built-in 2.4Ghz WiFi
Storage temperature	-20C° ~ 65C°
Working Temperature	-20C° ~ 65C°
ACCESSORIES	
Standard Accessories	USB Cable, Bicycle Mount, TF Card Reader, Manual, Type C OTG Adapter, Lanyard Cord

2. How to use?

Inserting a Memory Card:

If you have purchased the version without a memory card, you will first need to insert a TF card to the TF card slot(No. 22). TF cards support a range of 32-1024GB. For the first time, it will take approximately 10-20 seconds to format the TF card. Once the formatting is complete, the memory card information will be displayed in the top right corner of the screen.

Please note that if the inserted memory card is not in FAT32 format, the camera will automatically format it to FAT32. It is recommended to back up the data inside the memory card before inserting it to prevent any loss of data.

2.1 Power On

To power on the camera and prepare it for use, please follow these steps:

- 1) **Long Press the Power Button (No.1)**. As a result, the **Power LED (No.16)** will light up in **Green**, accompanied by a power-on sound. The LCD screen will display a welcome message.
- 2) The camera system will enter the recording standby mode.
- 3) The LCD screen will display the preview image, indicating that your body camera is ready to be used.

Note: If you have set the LCD Auto Off to activate after a certain period of inactivity, such as 5 minutes, or 10 minutes, the camera's LCD screen will automatically turn off if there is no interaction with the body camera.

2.2 Power Off

1. Long press the Power Button for at least 3 seconds.
2. The current recording file will be saved to the internal storage and the device will power off.

2.3 Video Recording

To begin recording video, **Press Video Button (No. 03)** one time. As a result, the Video LED(No.16) will begin flashing red slowly, and the recording seconds will be displayed on the screen. This indicates that the camera is now recording video. To stop recording video, press the Video Button again. The recording will stop, and the Power LED will return to a solid green, indicating that the camera has returned to Standby Mode.

SPIKECAM >>>

When fully charged, the camera can record 1080P videos continuously for approximately 5-6 hours (with the infrared night vision turned off). However, if you enable Hyper Storage, the recording time will increase by an additional 10%-20%.

2.4 Audio Recording

To start recording audio, press the **Audio Button (No. 19)** one time. The camera will emit a beep prompt, and the LCD screen will show a microphone icon and recording seconds to indicate that the audio recording is ongoing. To stop recording audio, press the Audio Button again.

2.5 Take Photo

While in Standby Mode, press the **Photo Button (No.20)** once to capture a photo. The camera will emit a photo-taking sound, and the Video LED will flash red once.

2.6 Night Vision

While in Standby Mode, perform a long press on the Photo Button for 3 seconds to activate the night vision mode. The camera will switch to night vision mode, and the screen will display images in black and white. To exit the night vision mode, perform another long press on the button. If you have selected the **IR Filter as Auto** in the menu, the camera's night vision mode will automatically activate in low light conditions. In this case, long-pressing the Photo Button **will not activate** the night vision.

2.7 Lens Rotation

If you need to record a video in a different direction, you can achieve this by rotating the camera lens (**No.12**). After flipping the lens, the camera will correct the recording image direction automatically. If you are unsure how to operate it, you can refer to instructional videos for guidance.

2.8 SOS Alarm


While in Standby Mode, press the **SOS Alarm Button (No.21)** once to activate the SOS Alarm LEDs and Siren. The camera will emit a loud police siren sound to attract attention from nearby. Press the SOS Alarm Button **again** to cancel the siren. Press it one more time to deactivate this function.

2.9 File Playback and Deletion

In Standby Mode, press the **Right Button/Playback Button (No.06)** once to activate the Playback Review Mode. Use the **Left (No.08) and Right buttons** to browse through the **Video/Photo/Audio** files, and use the **OK Button(No.07)** to playback or pause video/audio file. In playback mode, use the **Video Button as the Return Button** to return to the previous menu or exit.

During the playback of long videos or audio files, you can **fast forward** by short pressing the right button. It supports a maximum speed of 8x.

If you wish to **delete a specific file**, select this file in the **thumbnails list** and then long-press the **Right Button** for more than 3 seconds. The camera will display a pop-up message asking if you want to delete this file. Use the OK Button to proceed with the deletion.

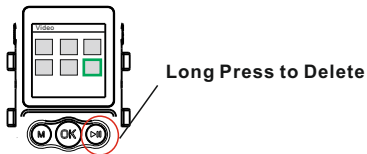

2.10 Charge The Camera

To charge the camera (No.4 Type C Port), use a **USB charger with a 5-volt output**, such as a mobile phone charger or a computer USB port. During charging, the Charging LED(No.16) will light up in blue and be off once the battery is fully charged. It takes approximately 3 hours to fully charge the camera.

For the first time use, we recommend charging the camera for 3 hours to ensure a full charge. **Please note that in order to protect the environment and reduce electronic waste, we do not provide a charger with the camera. If you really need one, please contact our customer support.**

2.11 Forcefully Shut Down

If the camera freezes or becomes unresponsive, you can forcefully shut it down by using a small paperclip or pin to press the **Reset Button (No. 02)**. Afterward, simply power on the camera again to restart it.

3. Camera Setting

To enter the Menu Setting Mode, simply press the Menu Button/Left Button (No.08) with a short press. You can use the Left and Right buttons to navigate through the menu items. Press the **OK Button** to make modifications to the selected setting. To go back or exit the Menu Setting Mode, use the **Video Button(Return Button)**.

Submenu Details are as Below:

1) **Resolution:** 4K/2K/1080P

These options represent the resolution at which the video will be recorded.

2) Photo Size: 8/12/14/20/26/34/40/48MP. These options represent the number of megapixels (MP) that will be captured in each photo. Higher resolutions generally result in larger photo sizes and potentially higher levels of detail, but it will occupy more storage and RAM. 8MP resolution is recommended.

3) Photo Burst: Selecting the options of off/3/5/10P, the camera will continuously capture photos after you press the photo button.

4) Post-record: Off/5sec/30sec/1min/5min. Enabling the Post-record feature allows the camera to continue recording for a specified duration of time after you stop the recording. For example, if you select "5sec," the camera will record an additional 5 seconds of video after you have pushed the stop recording slider. This feature is useful for capturing any important moments that may occur right after you have finished recording.

5) WiFi Mode: When WiFi is turned on, the standby screen will show the WiFi icon, indicating that it is active. For more details on using WiFi, please refer to Part 5 and Part 6.

6) Key Tone: If you set it to "Off," the camera will not emit beep sounds when keys are pressed. Please note that if you disable this feature, the SOS Alarm Siren sound will also be disabled accordingly.

7) LCD Auto Off: Off/1/3/5/10/15Mins. The camera LCD screen will turn off automatically if there is no interaction with body cam.

- 8) Auto Power Off:** Off/5/10/15mins. If there is no user interaction while the device is in standby mode, it will automatically shut down after a certain amount of time.
- 9) Record with Sound:** You can choose to turn off the sound during video recording by selecting "Off," which will only record the video image only without any audio. However, we recommend keeping the sound on to capture the full experience of the video.
- 10) Button Volume:** Adjust button volume to Off/Low/Medium/High
- 11) Hyper Storage:** Activating this feature reduces the video bitrate of the camera, leading to an 50% improvement in storage efficiency. However, it also results in a decrease in video quality.
- 12) Loop Record:** When loop recording is enabled, the camera automatically deletes the oldest video file to make room for the latest recording when the memory space is insufficient. We recommend enabling this function to ensure continuous recording and prevent storage issues.
- 13) Video Length:** 5/10/15/20/30mins. This setting determines the maximum duration of each video recording. Once the specified time limit is reached, the camera will automatically stop recording and start a new video file. Selecting a shorter video length may be useful if you prefer to have smaller video files especially while using WiFi feature. 5 mins is recommended.
- 14) Date Stamp:** If you set it to "Off," the time stamp will not be displayed in the video footage.
- 15) Motion Detection:** Off/On. If you turn on it, the camera will start video recording automatically if it detects large movement or shaking. After activation, there will be a countdown of 7 seconds, and then the camera will begin detecting movement.
- 16) Device ID:** Change the Device ID (7 digits). Utilize the Left and Right buttons to select the numbers and press the OK Button to proceed next digit.
- 17) Police ID:** Change the Police ID/User ID (6 digits). Utilize the Left and Right buttons to select the numbers and press the OK Button to proceed next digit.
- 18) Dash Camera Mode:** Off/On. If you turn on it, the camera will start video recording automatically if it detects any charging signal.
- 19) Stealth Mode:** By enabling this feature, all sounds and status light will be turned off.

- 20) IR Filter:** Infrared night vision mode. You can choose between Manual and Auto settings. In Auto mode, the infrared night vision light will activate automatically in low light conditions. In Manual mode, you need to long-press the photo button to toggle the night vision on or off.
- 21) Voice Broadcast:** When this feature is enabled, the camera will provide English voice prompts for each action. Please note that if you disable Key Tone or activate Stealth Mode, the voice prompts will also be disabled accordingly.
- 22) Language:** English, Chinese, Japanese, Korean, German, French, Russian, Italian, Spanish, Portuguese
- 23) Format SD Card:** Caution: **Formatting the SD card will result in the loss of all data stored on it. Please ensure that you have backed up any important files before proceeding with the formatting process.**
- 24)Default Setting:** Restoring Factory Defaults
- 25)Date&Time:** Use the Left/Right and OK buttons to set up the correct date and time.
- 26) Version:** Camera firmware version

4. Connect to PC/Mobile Phone

To connect the camera to a PC, use a Type C USB cable to connect the camera to the PC via the Type C Port (No.04). Once connected, the camera's LCD screen will display "**Connection Succeeded**", The camera will turn into an USB drive on your computer, allowing you to copy files between the camera and the PC. Videos, audio files, and photos are stored in their respective folders.

You can also remove the memory card from the camera and use the included **TF card reader** to access the files on your computer. If your phone supports OTG functionality, you can use it to read the memory card as well. A Type C OTG adapter is included for your convenience. For iOS devices, you will need to purchase a specific OTG adapter designed for iPhones.

When using OTG on your phone to read videos, be aware that the memory card's transfer rate is USB 2.0, which can make **copying large video files slow**. To improve this, set the video length to shorter segments (5 minutes) or enable the HyperStorage feature.

You can refer to **our training videos** for more detailed instructions.

5. How to Use WiFi?

1. To get started, download and install the **Viidure** App on your phone. You can scan the QR code below to download the app, or search for "**viidure**" directly on the Apple Store or Google Play. For the best playback experience, we recommend using iPhone, as it will provide a more stable connection.



2. To connect to the camera, turn on the camera's WiFi Mode in the menu setting (**Part 3 Camera Setting->5) WiFi Mode Option**).

In your phone's WiFi list, find a hotspot with a name starting with **H82P_XXXXXXXX** and connect to it using the password **12345678**.

3. Open the viidure App. If the text "**Camera is connected**" appears in the bottom, congratulations! The connection between the viidure App and the camera has been successfully established. If "**Camera Disconnected**" appears, please check your WiFi list to ensure that you have successfully connected to the camera's WiFi. Then return to the viidure App to check the connection status.

After successfully connected, the camera's screen will also display the WiFi **hotspot name and password information**.

4. How to turn off WiFi? Press the Record button (also called the Return button) to return to the standby screen. Then, go to the menu settings to turn off WiFi. If there is no connection for a long time, the WiFi will also automatically turn off.

6. How to use viidure App?

6.1 Playback Files

- (1) Click the “**Access Camera**” button to enter camera preview mode. Camera will start video recording automatically.
- (2) Click the **Recorder Icon** to start or stop video recording.
- (3) Click the **Camera Icon** at the bottom to capture a photo.



Access Camera




Recorder Icon



Camera Icon



- (4) Click the “**Camera Files**” icon at the left bottom to playback video files, and select a video file to play or download.

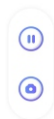


Camera Files



6.2 Camera Parameter Setting

To access the camera settings, click the **"Camera Settings"** icon located in the right bottom corner of the screen. Here are some of the camera settings that you can adjust:

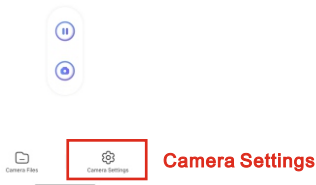

Sound Recording: Same as the "Record with Sound" feature in Part 3.

Video Resolution: Same as the "Resolution" feature in Part 3.

Loop Record Options: Same as the "Video Length" feature in Part 3.

Exposure Compensation: Adjusts the exposure value.

Time Stamp: Same as the "Date Stamp" feature in Part 3.

Image Resolution: Same as the "Photo Size" feature in Part 3.

We recommend configuring these settings through the camera's Menu, rather than using the WiFi settings, to avoid conflicts.

Tips:

1. **Avoid pressing any buttons** on the camera while using WiFi to prevent interruptions.
2. If the connection fails, **try restarting** both the camera and the Viidure app, then reconnect. Restarting resolves 80% of issues.
3. WiFi transmission can be unstable. If you have many video files, it's recommended to transfer them to your computer **via USB**.
4. If you disconnect from WiFi and need to use it again, we recommend restarting the camera.
5. For further assistance, refer to our video tutorials or contact our customer support at: info@spikecam.com

7. LCD Information



8. Mounting Accessories

The package includes additional accessories such as a Mini Tripod, Bike Mount, and Lanyard Cord. These accessories can be utilized to meet various usage scenarios. Additionally, the bottom of the camera features a 0.25-inch threaded hole that is compatible with numerous sports camera accessories, which you can purchase separately. For instructions on how to use the accessories, please refer to the instructional videos.

9. Trouble Shooting

- 1) If your camera is unable to boot, please ensure that the camera battery is fully charged for at least 2 hours. Once charged, try turning on the camera again.
- 2) If you're experiencing difficulties connecting the device to your computer, please attempt the following solutions:
 - Try using a different USB port on another computer.
 - Use a different USB cable for the connection.
- 3) If your camera is not responding or experiencing issues, you can try rebooting it by using a pin to press the Reset Button.

If the issues persist even after trying these solutions, please contact our customer service via email at info@spikecam.com for further assistance. For more detailed information about this body camera, please visit our website at <https://www.spikecam.com/z9pro>

